


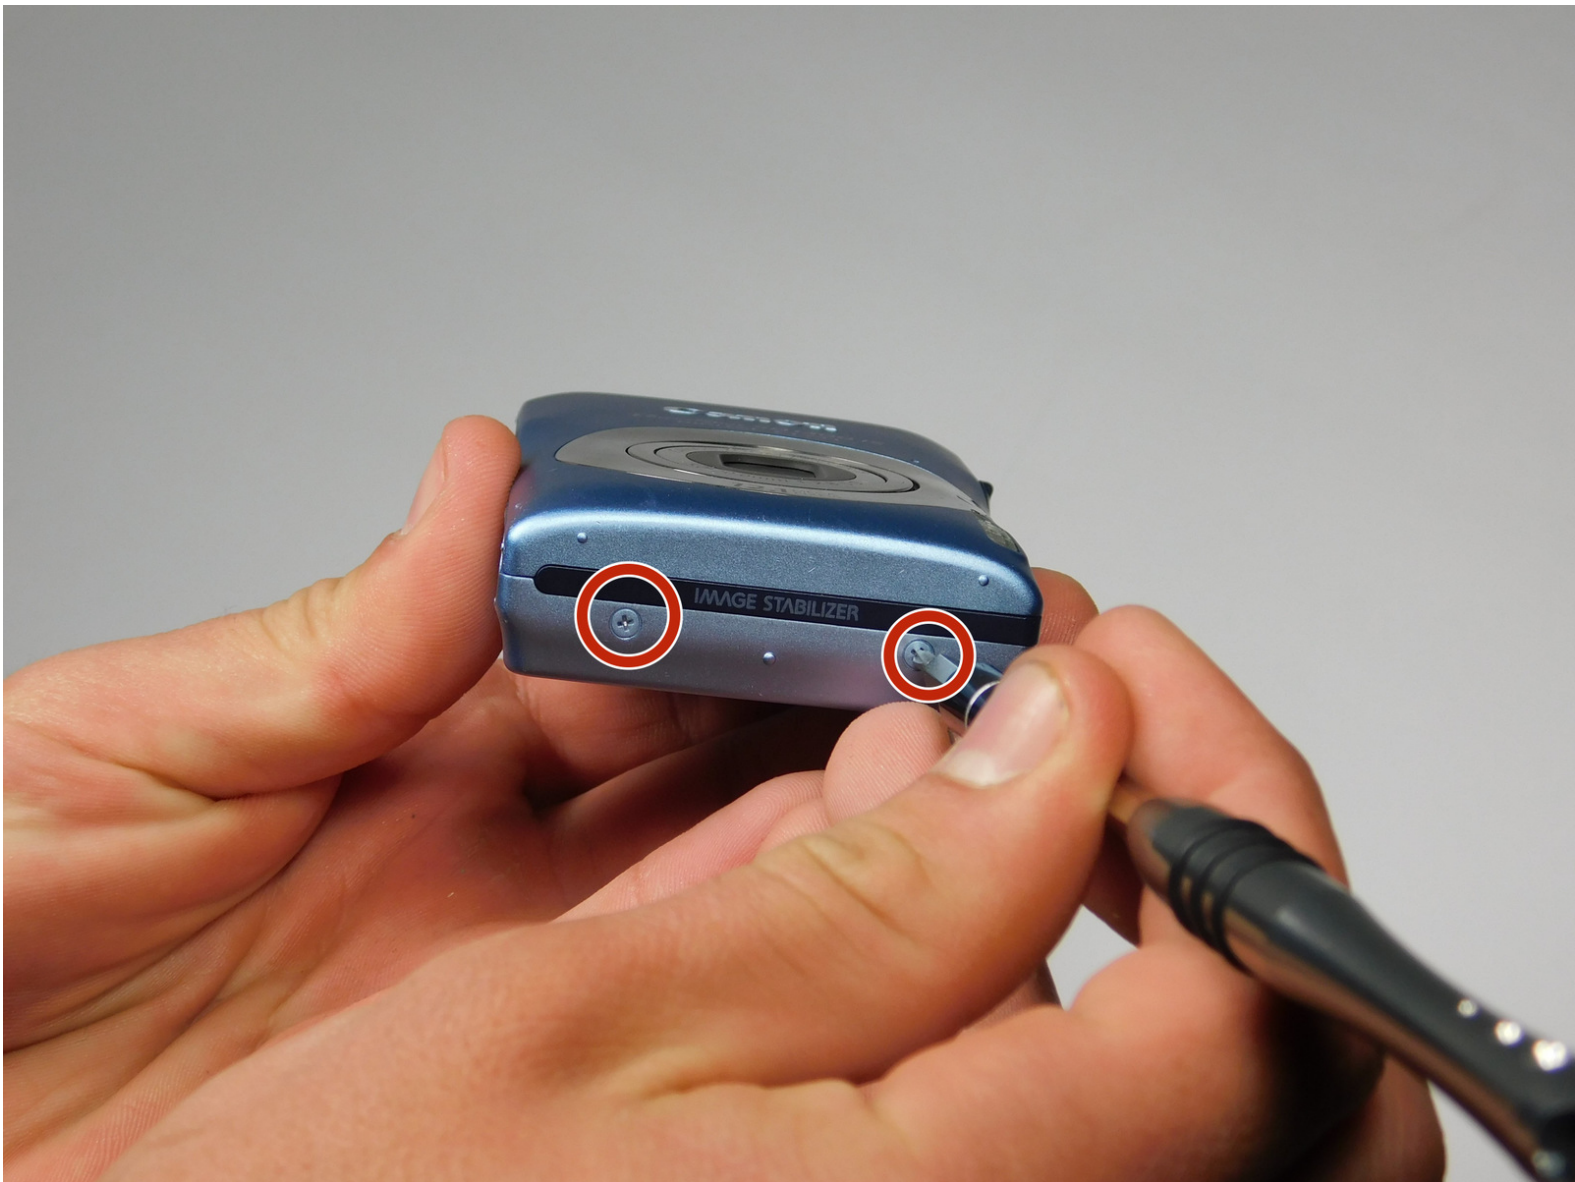

# Canon PowerShot SD1300 IS Screen Replacement

In summary this guide will demonstrate how to properly replace a broken or faulty screen on the Canon PowerShot SD1300 IS.

Written By: Clayton



## INTRODUCTION

This guide will show you how to properly replace the screen on your Canon Powershot SD1300 IS.

---




### TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS Driver Set](#) (1)

J00

---

## Step 1 — Screen

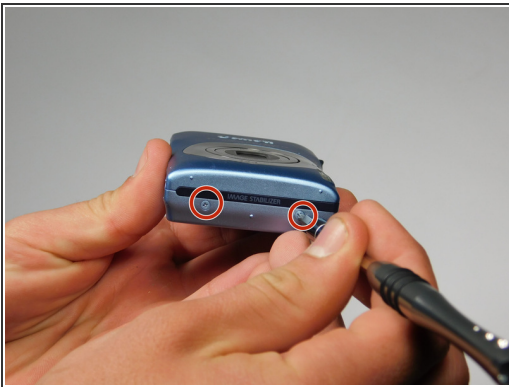

- Remove the two 2mm J00 screws on the right exterior.
- Remove a single 4 mm J00 on the bottom exterior.
- Remove a single 3mm J00 on the left exterior.

## Step 2



- Once the front shell of the camera is removed the back shell should slide off just the same.




## Step 3



- Use one of your plastic opening tools to separate the screen from the main body of your PowerShot.

## Step 4

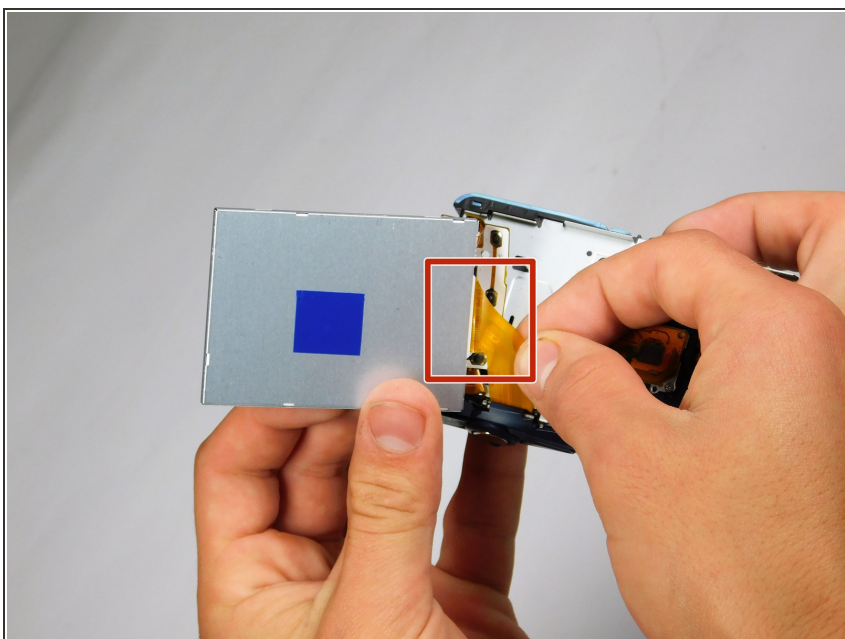

- Hold screen and remove connecting power cord by pulling cord away from the faulty screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 11:29:44 AM.